


fa future automation




MODEL	DESCRIPTION	MIN SCREEN HEIGHT	MAX SCREEN HEIGHT
SPS-V-5	Vertical - Single Panel	700 [27 9/16"]	800 [31 1/2"]
SPS-V-6	Vertical - Single Panel	801 [31 9/16"]	950 [37 3/8"]
SPS-V-7	Vertical - Single Panel	951 [37 7/16"]	1100[43 5/16"]
SPS-V-8	Vertical - Single Panel	1101[43 3/8""]	1250[49 3/16"]
SPS-VS-6	Vertical - Double Splitting Panel	800 [31 1/2"]	950 [37 3/8"]
SPS-VS-7	Vertical - Double Splitting Panel	951 [37 7/16"]	1100[43 5/16"]
SPS-VS-8	Vertical - Double Splitting Panel	1101[43 3/8""]	1250[49 3/16"]


SPS-VS - VERTICAL SPLIT - DOUBLE PANEL

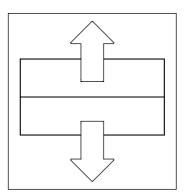

SPS-HZ - HORIZONTAL - SINGLE PANEL

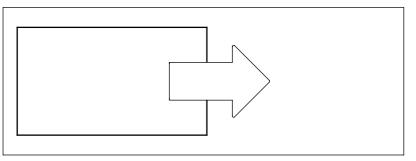

SPS-HZS - HORIZONTAL SPLIT- DOUBLE PANEL

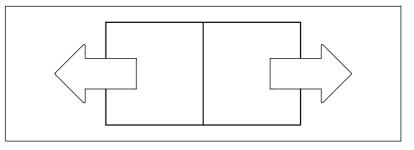


MODEL	DESCRIPTION	MIN SCREEN WIDTH	MAX SCREEN WIDTH	
SPS-HZ-6	Horizontal - Single Panel 1400 [55 1/8"]		1600 [63"]	
SPS-HZ-7	Horizontal - Single Panel 1601 [63 1/16""]		1850 [72 13/16"]	
SPS-HZ-8	Horizontal - Single Panel	1851 [72 7/8"]	2100 [82 11/16"]	
SPS-HZS-6	Horizontal - Double Splitting Panel	1400 [55 1/8"]	1600 [63"]	
SPS-HZS-7	Horizontal - Double Splitting Panel	1601 [63 1/16""]	1850 [72 13/16"]	
SPS-HZS-8	Horizontal - Double Splitting Panel	1851 [72 7/8"]	2100 [82 11/16"]	



future automation


SPS-V - VERTICAL - SINGLE PANEL

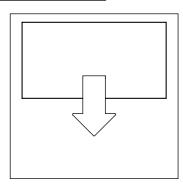




SPECIFICATION	MEASUREMENTS	
Minimum Screen Height	801 [31 1/2"]	
Maximum Screen Height	950 [37 3/8"]	
Minimum Screen Width	1400 [55 1/8"]	
Maximum Screen Width	1900 [74 13/16"]	
Maximum Moving Panel Weight	35Kg (77lbs)	
Maximum Screen Weight	80Kg (176lbs)	
Total Mechanism Weight	TBC	
Packaging Dimensions (LxWxH)	ТВС	
Shipping Weight	TBC	3. Panel Lifts
Movement Type	Motorised	
Power Supply Required	110V - 240V AC	
Power Consumption Max.	120W	
Power Consumption Standby	3W	
Mounting Patterns Supported	VESA 400, 300, 200 W x 400, 300, 200 H	
Control Options	IR Remote, RS232	
Product Options / Features	AB pairing option	
Package Contents	Mechanism, IR remote control, Bolt Pack	
Marine Suitable	Yes (Indoor)	

UK +44 (0) 1438 833577 **US** +1 (603) 742 9181 www.**FUTUREAUTOMATION**.NET

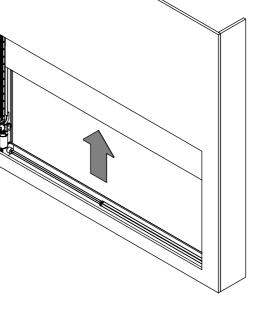


future automation


2. Panel Retracts

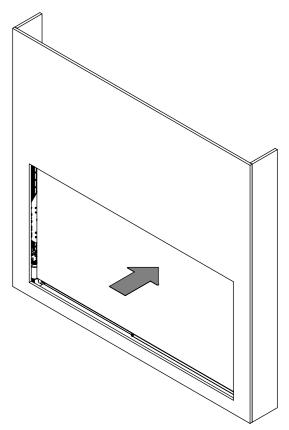

4. Screen Advances

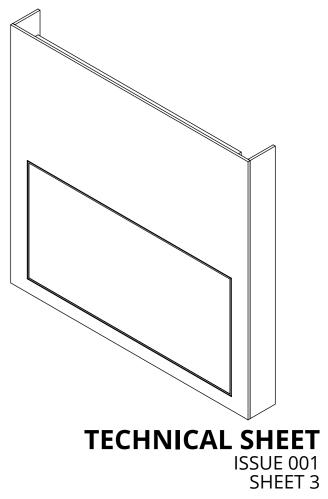


CABINET DIMENSIONS - WIDTH AND HEIGHT

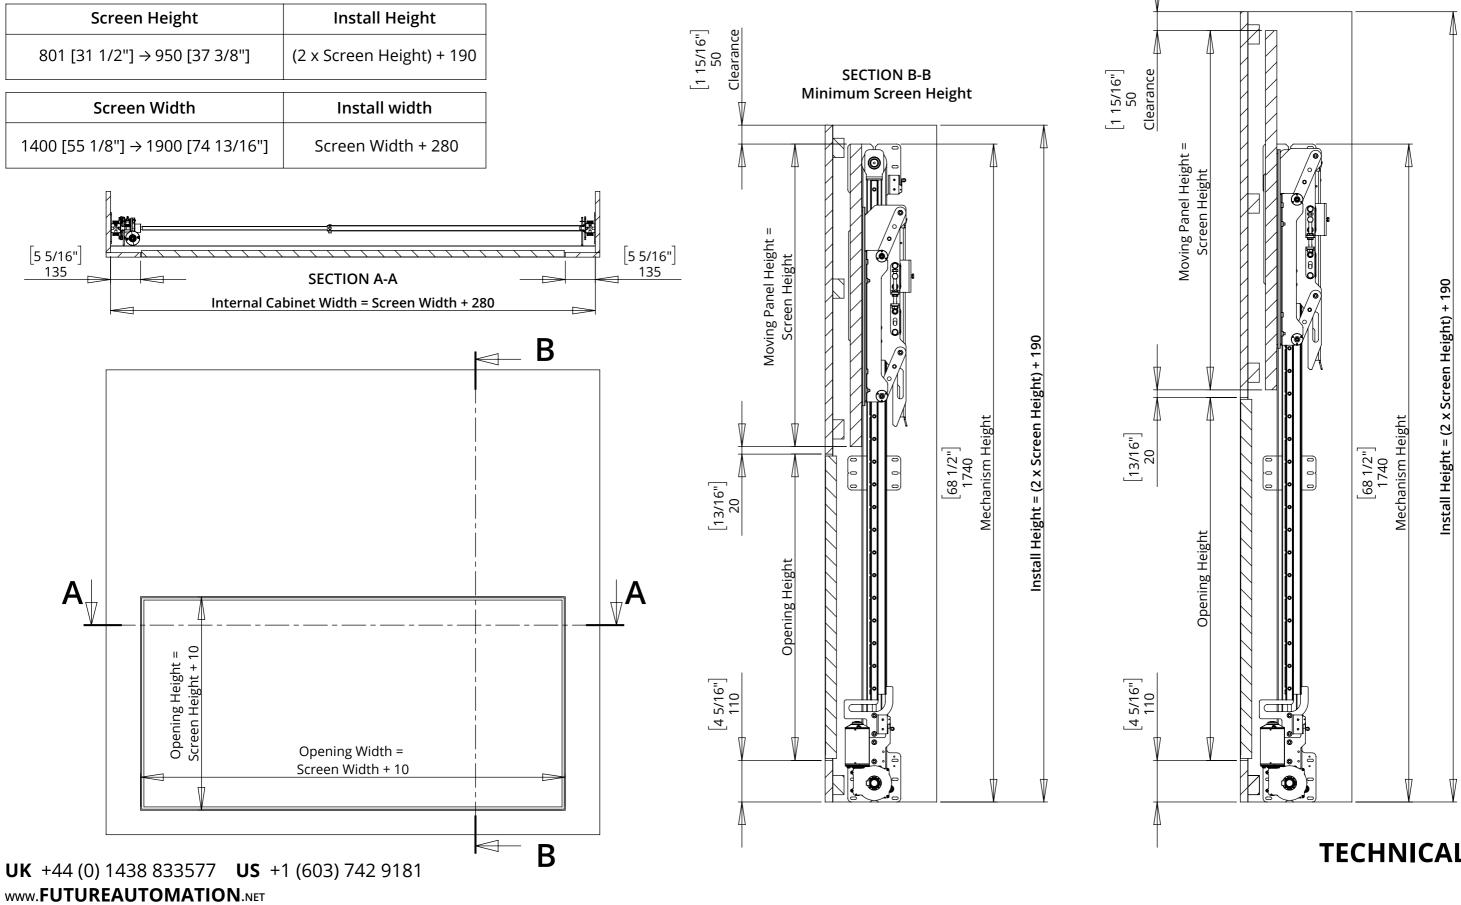


future automation

SECTION B-B Maximum Screen Height

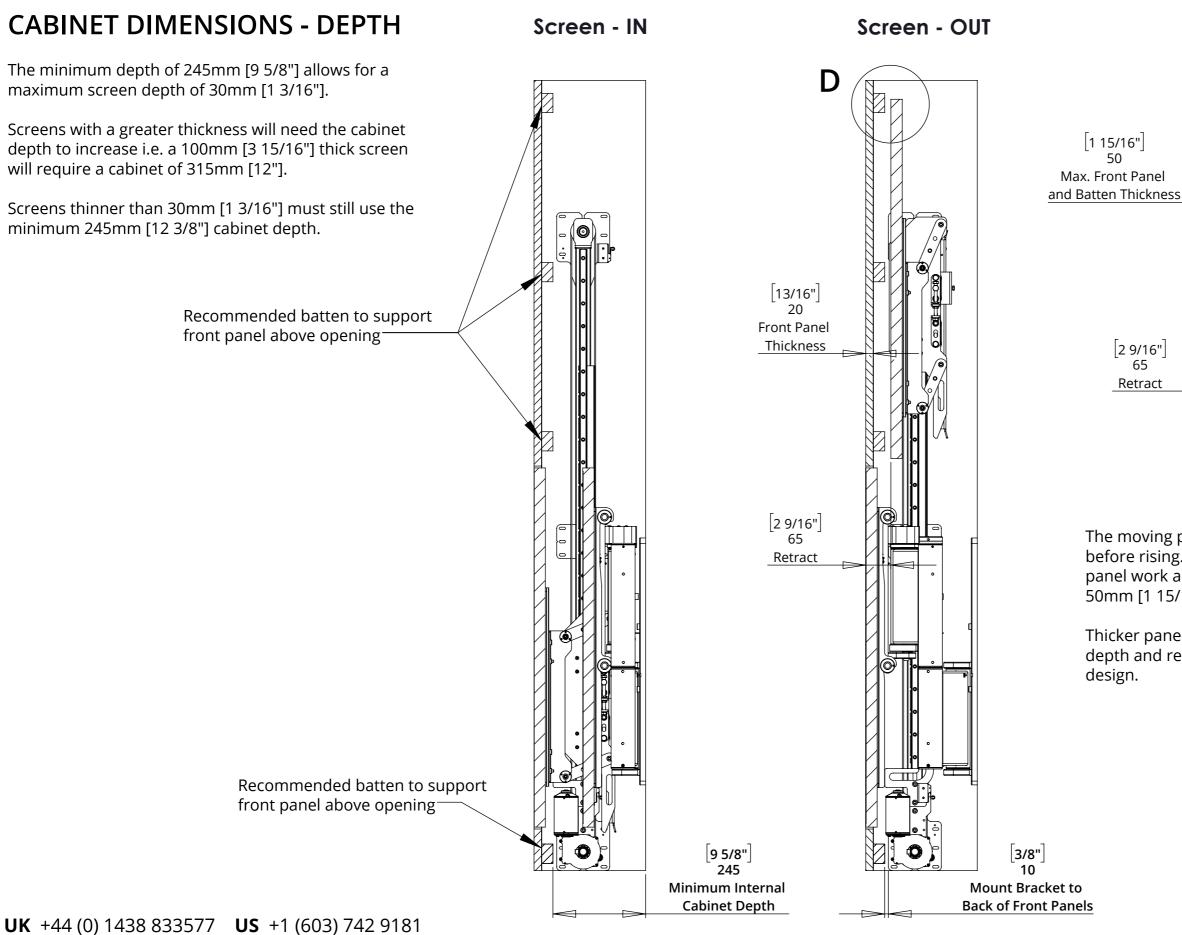

WWW.FUTUREAUTOMATION.NET

future automation

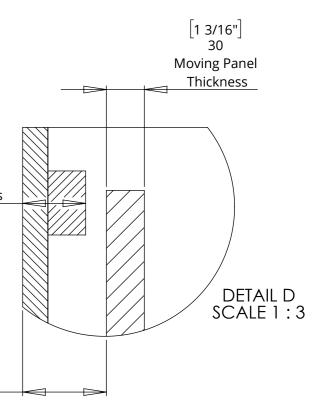

The moving panel retracts back by 65mm [2 9/16"] before rising. For this reason it is advised the front panel work and support batten is no more than 50mm [1 15/16"] thick to give 15mm [9/16"] clearance.

Thicker panels are possible, but will add to the cabinet depth and require customisation to the mechanism




CABINET DETAILS INVERTED

Screen Height	Install Height				
801 [31 1/2"] → 950 [37 3/8"]	(2 x Screen Height) + 190				B
Screen Width	Install width			M	
1400 [55 1/8"] → 1900 [74 13/16"]	Screen Width + 280			Opening Width = Screen Width +10	
The SPS-V can be inverted so the par mechanism used is the same as in th is just rotated through 180°.	el retracts the drops instead e original orientation, the m	d. The echanism	Dpening Height = Screen Height +10		
1. Panel Retracts	2. Panel Drops	A			
					B
		[5 5/16"] 135		Internal Cabinet Width = Screen Width	<u>+ 280</u>
				ĝ	

SECTION A-A SCALE 1 : 16




future automation

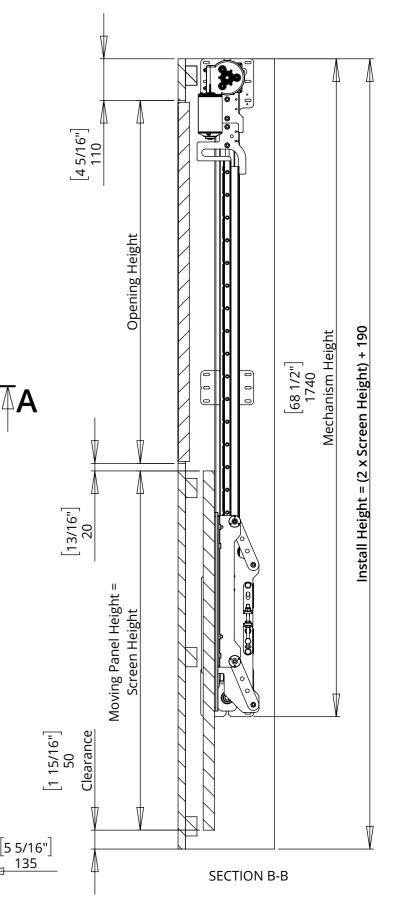



QA2-60 - QUAD ARM

The QA2 has a service mode that can be used during installation and servicing of the mechanism and the screen.

This allows the screen to be advanced out from the wall to provide access to rear of the screen and inside the mechanism during fitting.

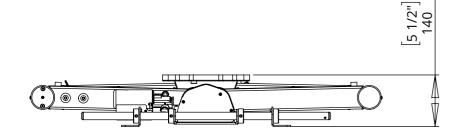

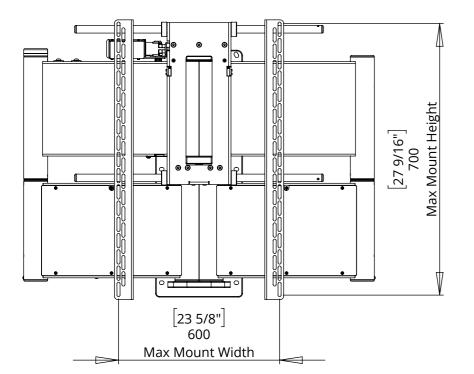

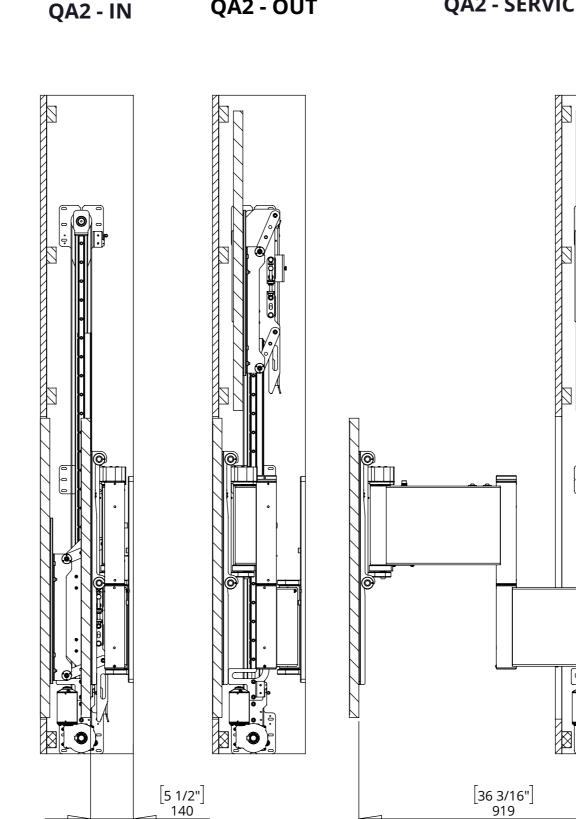


QA2 - OUT



QA2 - SERVICE

future automation

QA2 - SWIVEL

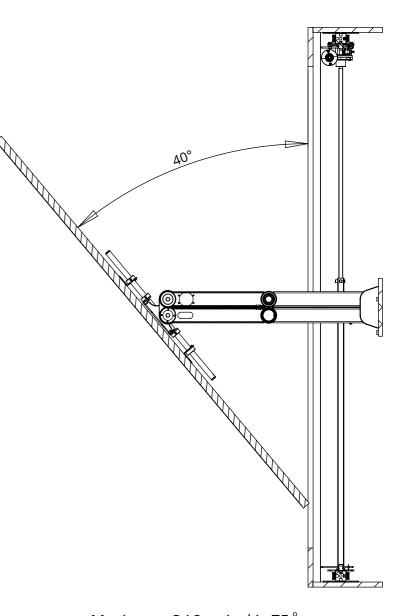

Maximum QA2 swivel is 75°. However depending on the screen and cabinet depth this will need to be reduced to prevent the screen being obscured by the cabinet.



CABINET DETAILS & ACCESS

The SPS mechanism requires certain access for installation and to be serviced.

For installation the top panel must be removable to provide access to all the fixing points of the SPS mechanism.

For servicing the best option is to have the areas to the left and right of the opening on hinges. This will provide enough access to everything that will be needed to service and maintain the mechanism. Alternatively the side panels could be made to be easily removable on suitable catches / fixings.

The Moving Panel Mechanism mounts to the side walls of the cabinet, and the Advance Bracket mounts to the back of the cabinet. It is essential that these surfaces can take the weight of the mechanism, moving panel and screen.


The mechanism is supplied with a control box on a 3m [10'] flying lead. This must be fitted in an easily accessible location. This will be the first item to be checked if there is an issue with the mechanism. Mains power and control connections (IR sensor / receiver, RS232) are all made at the control box.

Hinging side panel (removable for service & maintenance) Moving panel bracket E. Moving Panel Mechanism Motor Contact Closure Link Mechanism Cables Power Cables Control box wiring loom must be routed to the bottom left corner of the cabinet Telescopic Drive shaft


To Mains Power



future automation

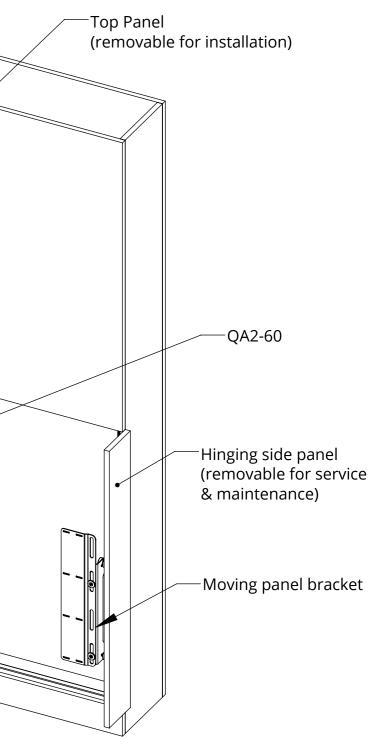

CONTROL BOX

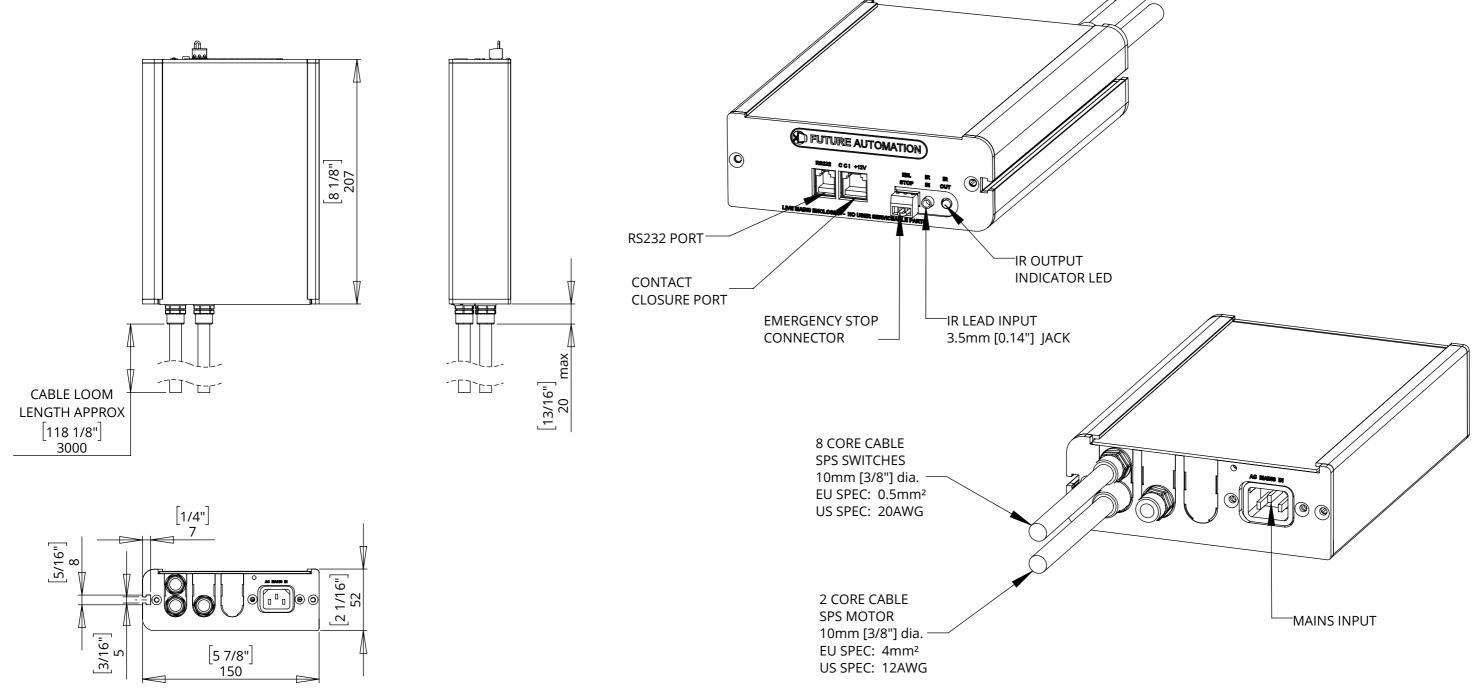

<u>NOTES</u>


- POWER SUPPLY UNIT (PSU) WILL ALLOW 110V OR 240V AC INPUT. THE SAME PSU IS USED FOR EU OR US MAINS SUPPLIES.
- OTHER THAN CONTROL CABLES, ALL CABLES TERMINATE AT CONTROL BOARD VIA STANDARD PHOENIX CONNECTORS.
- CABLE LOOM LENGTH SUPPLIED AT APPROX. 3m [118"]. LOOM CAN BE EXTENDED UP TO MAXIMUM OF APPROX. 10m [400"].
- MINIMUM CABLE BEND RADIUS 25mm [1"].

UK +44 (0) 1438 833577 **US** +1 (603) 742 9181 www.**FUTUREAUTOMATION**.NET



future automation



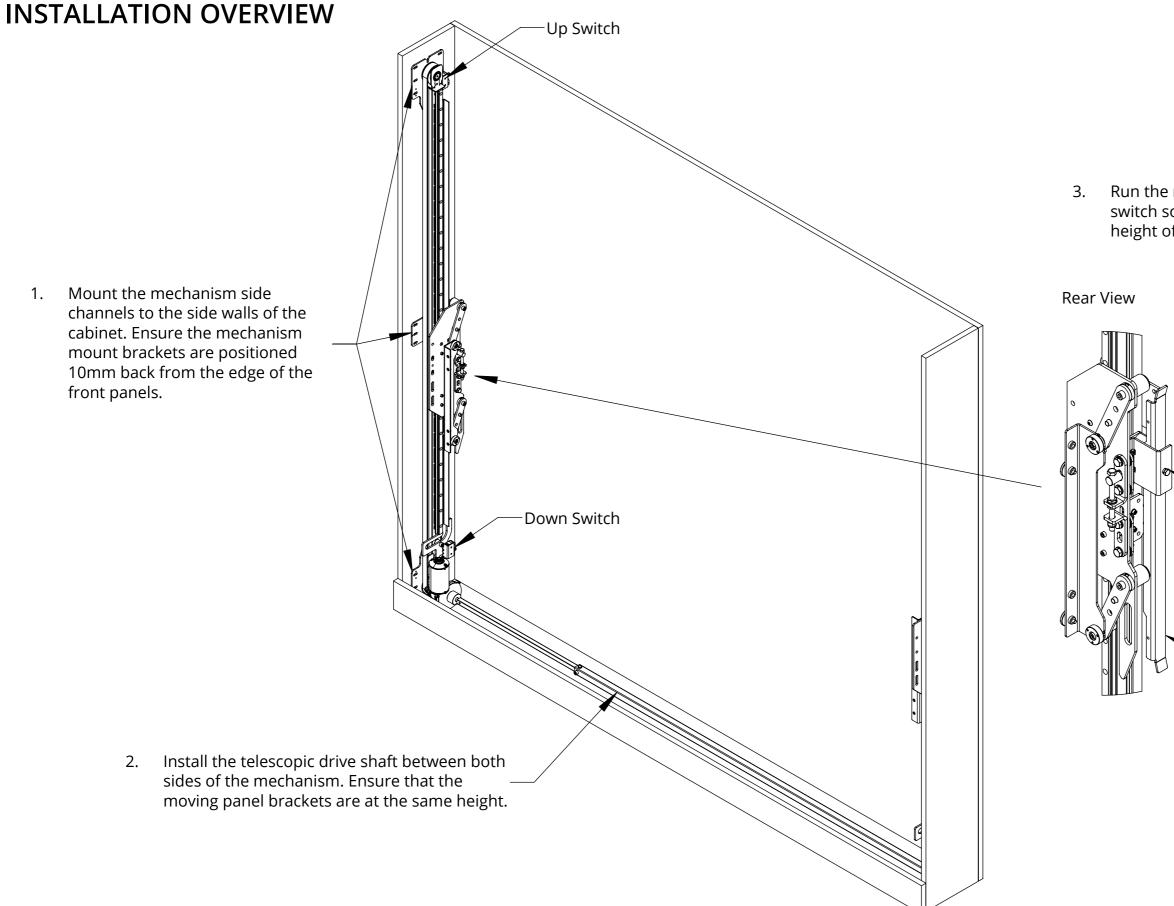

future automation

3. Run the mechanism, adjust the up switch so that the carriages moves the height of the moving panel + 25mm [1"].

Up Switch Adjustment

Loosen the bolt and slide the switch striker to the desired position. Ensure the bolt is tightened after adjustment.


Switch Striker




INSTALLATION OVERVIEW

Mount the moving panel to the moving panel brackets 110mm 4. from the base of the moving panel and 94mm in from the edge.

Mount the moving panel back onto the mechanism, use the slots in the 5. mount brackets to align the panel and get it into the desired position.

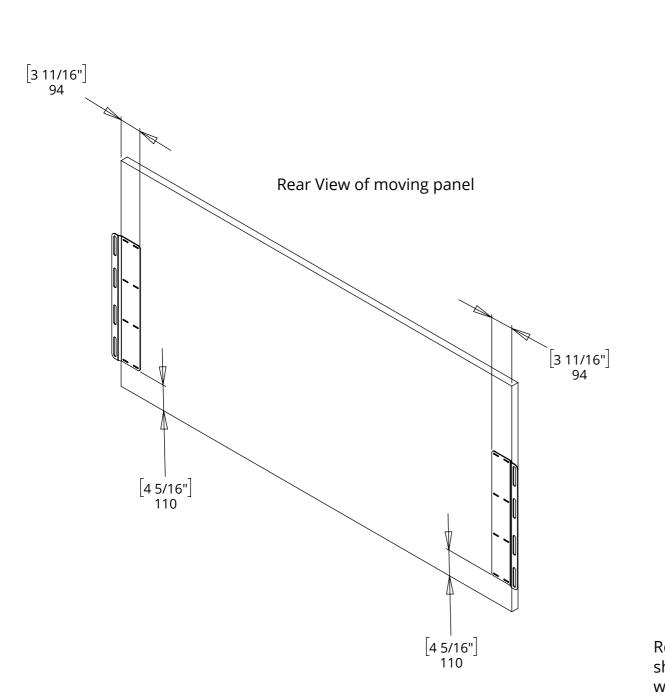

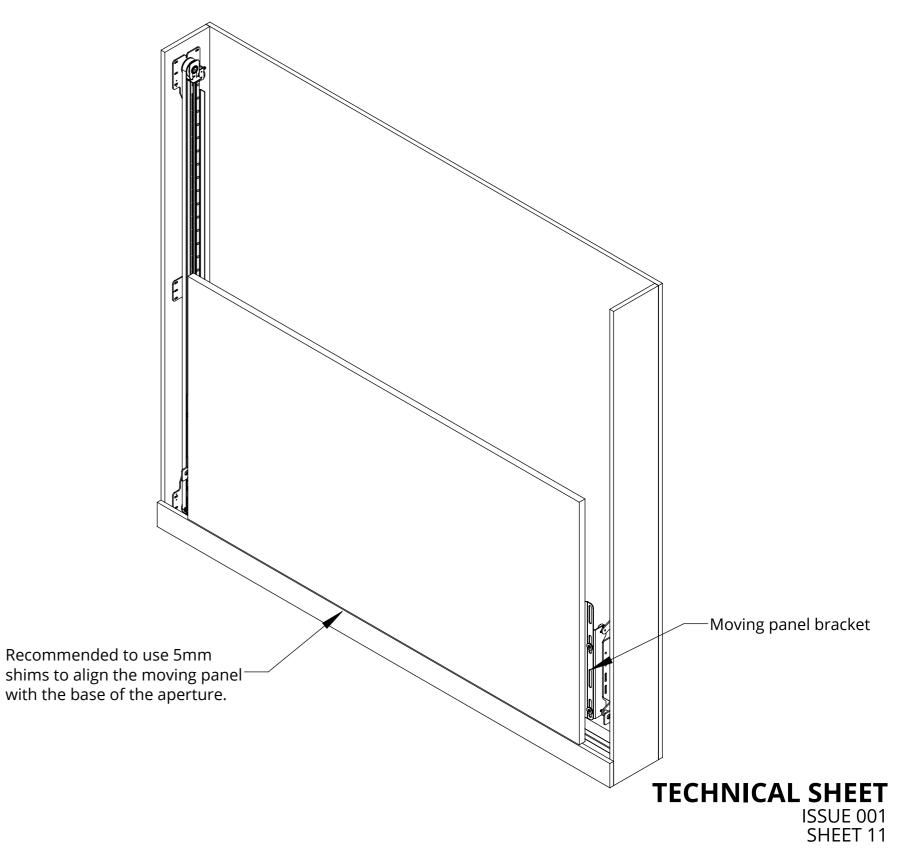

future automation